

# MF2400B Series

# **Microwave Frequency Counter**

10 Hz to 20/27/40 GHz



The Most up to Date Comprehensive Frequency Measurement Available

# Latest Burst Wave Measurement

The line up of MF2400B series is composed of three frequency counters: the MF2412B (20 GHz), the MF2413B (27 GHz), and the MF2414B (40 GHz).

They are ideal for evaluating mobile radio communications devices and circuits, and are also able to measure the carrier frequency and pulse width of burst signals.

In addition to displaying measurements results on a 12-digits LCD, the frequency values can be read using the analog display function, which can be used for monitoring

evaluation and especially for frequency adjustment, etc., of various types of oscillators.

Furthermore, the template function is useful for assessing whether or not the measurement results fall within the upper and lower frequency limit specifications; the evaluation result is output from the AUX connector on the rear panel as Go/No-go signal. An easy-to-use automatic measurement system can be configured using the GPIB function.



### Wide Band Measurement

The line up of three counters upper frequency limits of 20, 27, and 40 GHz meet every type of usage requirement. In addition, a high-frequency fuse holder and fuse element protect the input circuit from excessively powerful signals, and a variety of adapters are available for coupling each connector.

## High-Accuracy Burst Measurement

The carrier frequency, burst width and burst repetition rate of a 100 ns to 0.1 s burst signal input from INPUT 1 can be measured quickly at high accuracy.

Measurement	Positive selected	Negative selected	
Burst width	Measurement at Burst ON time	Measurement at Burst OFF time	
Burst repetition	Measurement of On-On period	Measurement of Off-Off period	

# Analog Display Function

Using this function, the entire LCD becomes an analog meter and the measured values are indicated by the position of the meter needle. In addition to grasping changes in the measured frequency, this permits faster frequency adjustment and Go/No-go judgement of oscillators which had to be read many digits of measured data before. This analog meter also solves problems of misreading of frequency value.



Moves left/right and indicates frequency value

# Template Function


When the upper and lower frequency limits have been preset, if the measured frequency is within the preset range, Go is displayed; if it is out of range, No-go is displayed. In addition, the Go/No-go signal can be output from the AUX connector on the back panel as a TTL signal.

This is very useful for configuring an automatic device Pass/Fail evaluation system (using analog display).

### High-Speed Transient Measurement

Frequency counters have an interval when measurement is not performed (sample rate), so that sudden frequency changes during this period can not be measured.


However, the MF2400B series overcomes this problem by capturing frequency changes at speeds of up to  $10\,\mu s$  and saving a maximum of 2000 sampling points. When it is combined with a host computer, frequency changes can be displayed graphically. This is very effective for measuring VCO start-up characteristics and PLL lock times.

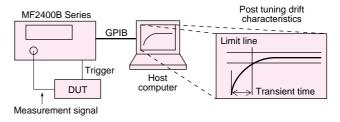


## Gating Function

At burst signal measurement, the carrier frequency may be different at the start, middle, and end of the burst. In the MF2400B series, the carrier signal frequency at any

position of the signal (delay time from trigger signal leading edge) and at any specified time (gate time) can be measured using a combination of the gating and trigger delay functions.

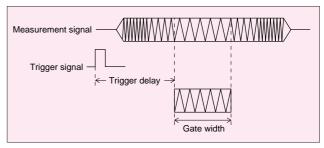

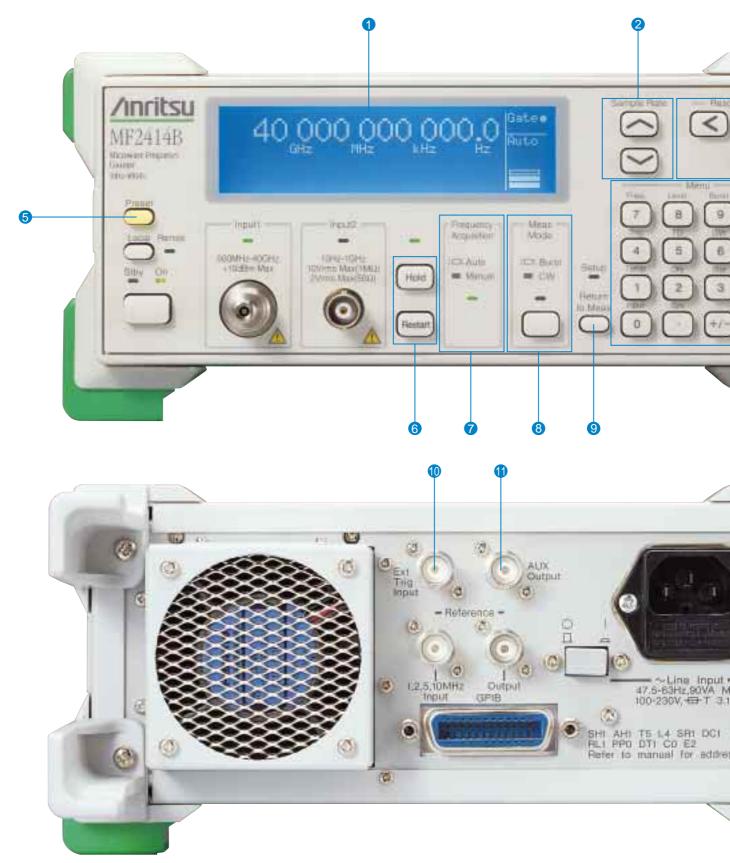





1 248 x 60 dot LCD displaying measurement results and parameter settings.

#### 2 Sample Rate

Sets measurement off time

#### 3 Resolution

At normal measurement, the  $\triangleleft$  and  $\triangleright$  keys switch the frequency measurement resolution. However, when setting parameters, the  $\triangleleft$  and  $\triangleright$  keys are used to select the setting item; the selected item is confirmed by pressing the Enter key.

#### 4 Menu

This key sets measurement functions such as frequency, level and burst, etc. It automatically changes to the parameter setting condition, and changes numerics and units.

#### 6 Preset

Pressing this key returns each parameter to the initial setting.

#### 6 Hold, Restart

The Hold key is used to hold to measured valued. When Hold is ON, the key lamp is lit. The Restart key starts measurement over. When the Restart key is pressed when Hold is ON, the latest data is measured and hold.

#### **7** Frequency Acquisition

This is used at frequency measurement of Input 1. At Auto, the full frequency band is swept and the frequency of signals exceeding the specified level is measured. At Manual, the preset frequency and the frequency in input allowable frequency range can be measured.

#### 8 Meas Mode

At Burst, the burst signal width, period and carrier frequency can be measured (not related to Acquisition key setting, and change in to the manual measurement condition). Continuous wave measurement is performed at CW mode.

#### Return to Meas

Pressing this key after setting parameters, returning the counter to the normal measurement status.

#### Ext Trig Input

Measures frequency by using external timing signal

#### **11** AUX Output

Outputs control signal of the measurement function and parameters which are set.



# MF2400B Series

Input	Frequency range	INPUT 1 MF2412B: 600 MHz to 20 GHz MF2413B: 600 MHz to 27 GHz MF2414B: 600 MHz to 40 GHz INPUT 2 10 MHz to 1 GHz (50 Ω), 10 Hz to 10 MHz (1 MΩ)		
	Input level range (sine wave input)	INPUT 1  -33 to +10 dBm (<12.4 GHz), -28 to +10 dBm (<20 GHz),  -25 to +10 dBm (<27 GHz), [-44.6 + 0.741 x frequency (GHz)] to +10 dBm (≤40 GHz)  INPUT 2  25 mVrms to 2 Vrms (50 Ω), 25 mVrms to 10 Vrms (1 MΩ)		
	Impedance, coupling	INPUT 1: $50~\Omega$ , AC couple INPUT 2: $50~\Omega$ or $\geq 1~M\Omega$ ( $\leq 35~pF$ ), AC couple		
	Connector	INPUT 1 MF2412B: N-type, MF2413B: SMA-type, MF2414B: K-type INPUT 2: BNC-type		
Gating function	Trigger mode	INT: Triggered by measurement signal EXT: Triggered by external signal *Trigger level: 1.5 V ± (2 to 10 Vp-p), Trigger pulse width: ≥1 μs, Impedance: ≥100 Ω, Coupling: DC LINE: Triggered by AC line signal		
Gating	Trigger delay	20 ns to 0.1 s*1, off (≤320 ns in 20 ns steps, and <1 µs in 40 ns steps variable; ≥1 µs in continuously variable as effective two digits)		
	Gate width	100 ns to 0.1 s (<1 μs in 20 ns steps variable; ≥1 μs in continuously variable as effective two digits		
	Frequency range	MF2412B: 600 MHz to 20 GHz MF2413B: 600 MHz to 27 GHz MF2414B: 600 MHz to 40 GHz		
<b>=</b>	Pulse width	100 ns to 0.1 s (NARROW), 1 µs to 0.1 s (WIDE)		
mer	Pulse repetition frequency	10 Hz to 4 MHz (pulse off time: ≥240 ns)		
Pulse modulation wave measurement	Carrier frequency measurement* <sup>2</sup>	Max. resolution: 10 kHz (pulse width: 100 ns to 1 $\mu$ s), 1 kHz (pulse width: 1 to 10 $\mu$ s), 100 Hz (pulse width: 10 to 100 $\mu$ s), 10 Hz (pulse width: 0.1 to 1 ms), 1 Hz (pulse width: 10 to 100 ms)		
Pulse	Pulse width measurement	Resolution: 1 ns Accuracy: ±20 ns ±time base accuracy x measurement pulse width ±trigger accuracy Unit indication: µs (fixed)		
	Pulse period measurement	Resolution: 1 ns Accuracy: ±20 ns ±time base accuracy x measurement period ±trigger accuracy Unit indication: µs (fixed)		
Carrier wave frequency measurement	Resolution, gate time	INPUT 1  NORMAL: 1 MHz/1 μs to 0.1 Hz/10 s  FAST: 1 MHz/0.18 μs to 0.1 Hz/1.8 s (typical)  INPUT 2  10 MHz to 1 GHz (50 Ω): 1 MHz/1 μs to 0.1 Hz/10 s  10 Hz to 10 MHz (1 MΩ): Shown below  Measurement period (times)  100 mHz 10 mHz 1		
	Measurement accuracy	INPUT 1  NORMAL: ±1 count ±time base accuracy x measurement frequency ±trigger accuracy ±residual error*5  INPUT 2  10 MHz to 1 GHz: ±1 count ±time base accuracy x measurement frequency ±trigger accuracy ±residual error*5  INPUT 2  10 MHz to 1 GHz: ±1 count ±time base accuracy x measurement frequency ±trigger accuracy ±trigger accuracy the same accuracy x measurement frequency ±trigger accuracy the same accuracy x measurement frequency ±trigger accuracy		

Auto/manual measurement	Auto FM tolerance: 35 MHzp-p, Acquisition time: ≤50 ms  Manual (CW measurement) Input allowable frequency range: ±30 MHz (600 MHz to 1 GHz), ±40 MHz (≥1 GHz) Acquisition time: ≤15 ms  Manual (Burst measurement) Input allowable frequency range: ±30 MHz (600 MHz to 1 GHz, pulse width mode: WIDE) ±20 MHz (≥1 GHz, pulse width mode: NARROW) ±40 MHz (≥1 GHz, pulse width mode: WIDE) Acquisition time: ≤15 ms	
Functions	Template: Inputs in upper/lower limit of frequency, judged on GO/NO-GO Frequency offset: +offset, -offset, ppm Statistical processing: mean, maximum, minimum, p-p	
AUX output	Output for GO/NO-GO, count end, input level detection, internal gating, restart, and acquisition signal	
Sample rate	1 ms to 10 s (1-2-5 steps), hold	
High-speed sample period/frequency resolution	INPUT 1: 10 μs/10 kHz, 100 μs/1 kHz, 1 ms/100 Hz INPUT 2: 10 μs/100 kHz, 100 μs/10 kHz, 1 ms/1 kHz  *Measurement frequency : 100 MHz	
Memory back up	Store in non-volatile memory at instrument power-down	
Display	Display digits: 12 digits and 1 digit (– mark) LCD: 248 x 60 dots (with back light)	
Reference crystal oscillator	Frequency: 10 MHz Warm-up: ≤±5 x 10 <sup>-8</sup> /day (after 30 min. warm-up) Aging rate: ≤±2 x 10 <sup>-8</sup> /day (after 24 h warm-up) Temperature characteristics: ±5 x 10 <sup>-8</sup> (0° to 50 °C)	
External reference input	1/2/5/10 MHz, Input voltage: 1 to 5 Vp-p (AC coupling), Input impedance: ≥1 kΩ	
External reference output	1/2/5/10 MHz*6, Output voltage: ≥2 Vp-p (open end, AC coupling), Output impedance: ≤400 Ω	
External control	GPIB (conforms to IEEE488.2 standards): SH1, AH1, T5, L4, SR1, RL1, PP0, DC1, DT1, C0, E2	
Power	85 to 132/170 to 250 V (auto switch), 47.5 to 63 Hz, ≤80 VA	
Operating temperature	0° to 50 °C	
Dimensions and mass	213 (W) x 88 (H) x 350 (D) mm, ≤5 kg	
EMC	EN55011: 1191, Group 1, Class A EN50082-1: 1992	
Safety	EN61010-1: 1993 (Installation Category II, Pollution Degree II)	

- \*1 Delay time until counter started by trigger detection

  \*2 MANUAL measurement mode

  \*3 fa: frequency resolution, TGW: gate width, Ts: processing time (50 µs), T: period (2/fa)

  \*4 Measurement frequency (GHz)/10 count (rms)

  \*5 Measurement frequency (GHz)/2 count (rms)

  \*6 10 MHz when using internal reference signal; outputs signal based on this signal (1/2/5/10 MHz) when using external reference signal

# Options 01/02/03: Crystal oscillator

Option number	01	02	03	
Frequency	10 MHz			
Aging rate	5 x 10 <sup>-9</sup> /day, 5 x 10 <sup>-8</sup> /month, 7.5 x 10 <sup>-8</sup> /year *After power on, with reference to frequency after 24 h	2 x 10 <sup>-9</sup> /day, 3 x 10 <sup>-8</sup> /month, 4.5 x 10 <sup>-8</sup> /year *After power on, with reference to frequency after 24 h	5 x 10 <sup>-10</sup> /day, 1 x 10 <sup>-8</sup> /month, 1.5 x 10 <sup>-8</sup> /year *After power on, with reference to frequency after 48 h	
Temperature	±5 x 10 <sup>-8</sup>	±1.5 x 10 <sup>-8</sup>	±5 x 10 <sup>-9</sup>	
characteristics	-10° to 60 °C (with reference to 25 °C)			



Please specify model/order number, name and quantity when ordering.

Model/order No.	Name	Remarks
MF2412B MF2413B MF2414B	Main frame – Microwave Frequency Counter Microwave Frequency Counter Microwave Frequency Counter	10 Hz to 20 GHz, N-J connector 10 Hz to 27 GHz, SMA-J connector 10 Hz to 40 GHz, K-J connector
J0017 F0012 W1520AE	- Standard accessories –         Power cord, 2.5 m:       1 pc         Fuse, 3.15 A:       2 pcs         MF2412B/2413B/2414B operation manual:       1 copy	
MF2412B-01 MF2413B-01 MF2414B-01 MF2412B-02 MF2413B-02 MF2414B-02 MF2414B-03 MF2413B-03 MF2414B-03	- Options - Crystal oscillator (5 x 10 <sup>-9</sup> /day) Crystal oscillator (5 x 10 <sup>-9</sup> /day) Crystal oscillator (5 x 10 <sup>-9</sup> /day) Crystal oscillator (2 x 10 <sup>-9</sup> /day) Crystal oscillator (5 x 10 <sup>-10</sup> /day)	
K224*1 34RKNF50 J0526 J0527 J0127A	<ul> <li>Optional accessories –</li> <li>Coaxial adapter (K-P•K-J, SMA compatible)</li> <li>Coaxial adapter (ruggedized K-P•N-J)</li> <li>Coaxial adapter (N-J•SMA-J)</li> <li>Coaxial cord (K-P•K-P), 2 ft</li> <li>Coaxial cord (BNC-P•RG-58A/U•BNC-P), 1 m</li> </ul>	DC to 40 GHz, SWR: 1.2 DC to 20 GHz, SWR: 1.25
J0853 J0854 MP612A* <sup>2</sup> MP613A* <sup>2</sup> J0007 J0008	Coaxial cord (N-P•SF104P•N-P), 2 m Coaxial cord (APC3.5-P•SF104P•APC3.5-P), 2 m Fuse Holder (N-P•N-J) Fuse Element GPIB cable, 1 m GPIB cable, 2 m	DC to 1 GHz DC to 1 GHz, Power rating: +17 dBm, Blow rating: ≥+35 dBm
B0409 B0329L J0837 J0060	Carrying case Protection cover Coaxial cord (N-P•N-P), 2 m Coaxial adapter (N-J•SMA-P)	With B0329L protection cover
B0390G B0411A	Rack mount kit Rack mount kit	19 inch type, one unit 19 inch type, two units, side by side

<sup>\*1:</sup> The K224 adapter is used to prevent damage to the input connector.

In addition, the MP612A Fuse Holder has an N-type connector, so an adapter is required according to the coupled connector type.

Specifications are subject to change without notice.

#### **ANRITSU CORPORATION**

5-10-27, Minamiazabu, Minato-ku, Tokyo 106-8570, Japan Phone: +81-3-3446-1111 Telex: J34372

Fax: +81-3-3442-0235 Overseas Subsidiaries

#### U.S.A.

#### **ANRITSU COMPANY**

North American Region Headquarters

1155 East Collins Blvd., Richardson, Tx 75081, U.S.A. Phone: +1-972-644-1777 Fax: +1-972-644-3416

#### Canada

#### ANRITSU ELECTRONICS LTD.

Unit 102, 215 Stafford Road West Nepean, Ontario K2H 9C1, Canada Phone: +1-613-828-4090 Fax: +1-613-828-5400

#### Brasil

#### ANRITSU ELETRÔNICA LTDA.

Praia de Botafogo 440, Sala 2401 CEP 22250-040, Rio de Janeiro, RJ, Brasil Phone: +55-21-5276922 Fax: +55-21-537-1456

#### • U.K.

#### ANRITSU LTD.

200 Capability Green, Luton, Bedfordshire LU1 3LU, U.K. Phone: +44-1582-433200 Fax: +44-1582-731303

#### Germany

#### ANRITSU GmbH

Grafenberger Allee 54-56, 40237 Düsseldorf 1, Germany Phone: +49-211-96855-0 Fax: +49-211-96855-55

#### France

#### ANRITSU S.A.

9, Avenue du Québec Z.A. de Courtabœuf 91951 Les Ulis Cedex, France Phone: +33-1-60-92-15-50 Fax: +33-1-64-46-10-65

ANRITSU S.p.A.
Via Elio Vittorini, 129, 00144 Roma EUR, Italy Phone: +39-06-502-26-66 Fax: +39-06-502-24-25

#### Sweden

#### **ANRITSU AB**

Botvid Center, Fittja Backe 1-3 145 84 Stockholm, Sweden Phone: +46-853470700 Fax: +46-853470730

#### Singapore

#### ANRIŤSU PTE LTD

6, New Industrial Rd., #06-01/02, Hoe Huat Industrial Building, Singapore 536199 Phone: +65-282-2400 Fax: +65-282-2533

#### Hong Kong

#### ANRITSU COMPANY LTD.

Suite 719, 7/F., Chinachem Golden Plaza, 77 Mody Road, Tsimshatsui East, Kowloon, Hong Kong, China Phone: +852-2301-4980 Fax: +852-2301-3545

#### Korea

#### **ANRITSU CORPORATION**

14F Hyun Juk Bldg. 832-41, Yeoksam-dong, Kangnam-ku, Seoul, Korea Phone: +82-2-553-6603 Fax: +82-2-553-6604~5

#### Australia

#### ANRITSU PTY LTD.

Unit 3/170 Forster Road Mt. Waverley, Victoria, 3149, Australia

# Phone: +61-3-9558-8177 Fax: +61-3-9558-8255

#### Taiwan ANRITSU COMPANY INC.

6F, 96, Sec. 3, Chien Kou North Rd. Taipei, Taiwan, R.O.C.

Phone: +886-2-2515-6050 Fax: +886-2-2509-5519

<sup>\*2:</sup> The MF2400B series has the MP612A Fuse Holder (with MP613A Fuse Element) to prevent input of excessive power.